



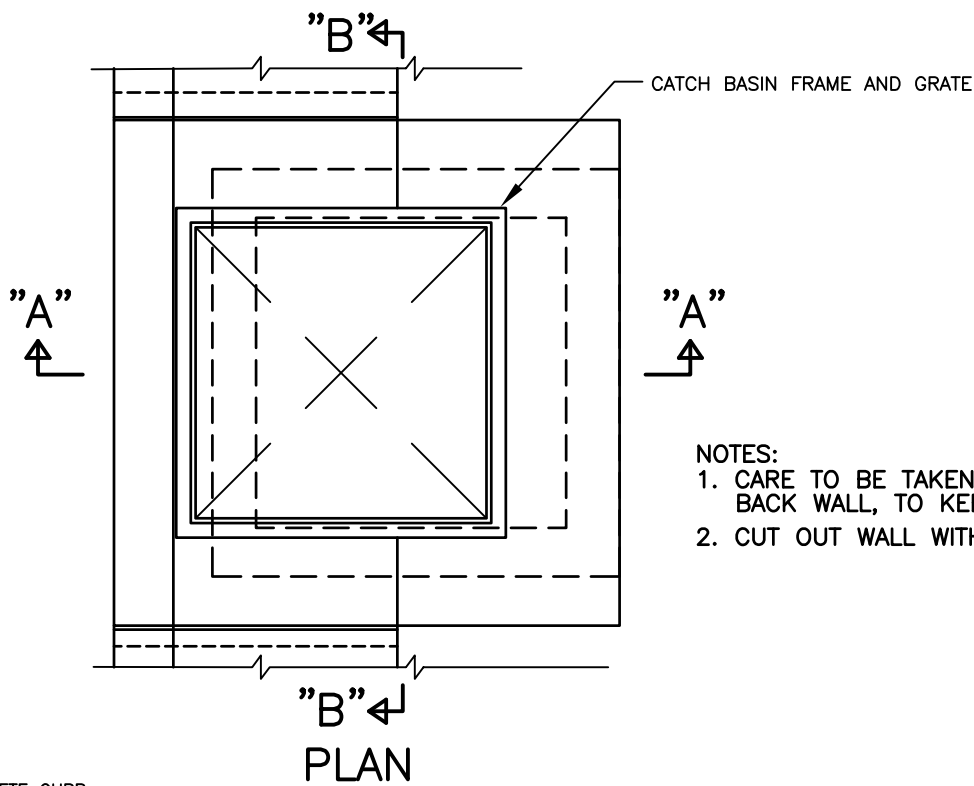

NOTES:

1. CARE TO BE TAKEN WHEN REMOVING EXISTING BACK WALL, TO KEEP EXISTING REINFORCING INTACT
2. CUT OUT WALL WITH CARBORUNDUM SAW

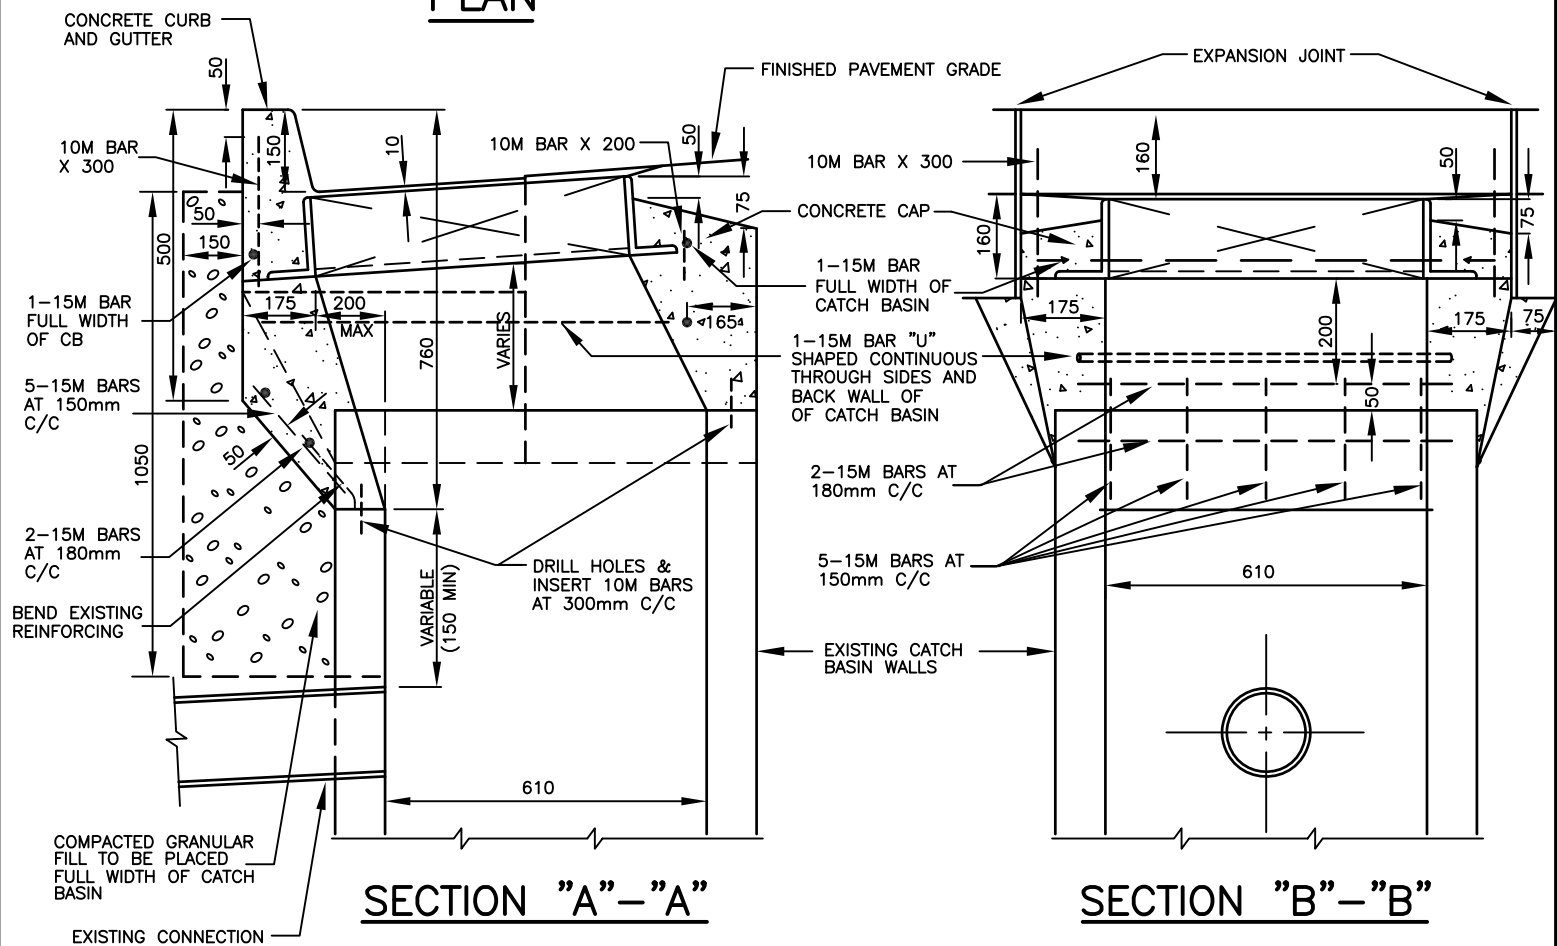

NOTE : MEASUREMENTS IN METRES AND/OR MILLIMETRES UNLESS OTHERWISE SHOWN.

CITY OF OSHAWA

CHK'D: *S.S.*

APP'D: *S.H.*

DATE: JAN. 16, 2012

MODIFYING EXISTING PRECAST CATCH BASIN TO FIT CURB AND GUTTER

REVISION No. 1

DATE: JAN. 16, 2012

OS-701